GameBlaster Pro

USER'S GUIDE

for Wii™

dreamGEAR®

www.dreamgear.net

GAMEBLASTER PRO SET-UP:

1) Place the Wii Remote and Nunchuck into the GameBlaster Pro by setting the Wii remote into the GameBlaster Pro's barrel casing and the Wii Nunchuck into the Nunchuck casing.

2) Attach the Rapid Fire Attachment onto the front of the Game-Blaster Pro by sliding it into place. To detach the Rapid Fire attachment, simply slide it forward and out.

CHARGING THE RECHARGEABLE BATTERY

1) Before using the Rechargeable Battery Pack, charge it for 3 hours.

2) To charge the battery, simply insert the Charging Cable's micro jack into the Rechargeable Battery Pack and plug the other end into any available USB port on the Wii console or any other USB charging port.

SET-UP THE RECHARGEABLE BATTERY PACK ON THE WII REMOTE

1) Place the Rechargeable Battery Pack into the back of the Wii Remote with the "teeth" end located on top of the Rechargeable Battery Pack going in first.

2) Snap into place using the clamp located on the bottom of the Rechargeable Battery Pack.

SET-UP THE RECHARGEABLE BATTERY PACK ON THE RAPID FIRE ATTACHMENT

1) Place the battery pack into the RAPID FIRE Attachment as shown in the picture below.

NOTE: The GameBlaster Pro comes with only 1 rechargeable battery pack. It can be used on EITHER the Wii Remote or the Rapid Fire Attachment.

USING THE GAMEBLASTER PRO

1) The GameBlaster Pro features a rotating barrel that allows the user to choose which barrel position is best for any given game.

dreamGEAR®

www.dreamgear.net

FOR TECHNICAL SUPPORT PLEASE CONTACT: 1-877-999-DREAM or support@dreamgear.net

2) The GameBlaster Pro also features a Nunchuck breakaway function. This feature is used when the game requires the Nunchuck to be used as a weapon (for example; the game may require the user to perform a throwing motion with the Nunchuck in hand.) To use the Nunchuck breakaway, press either side of the breakaway cable button.

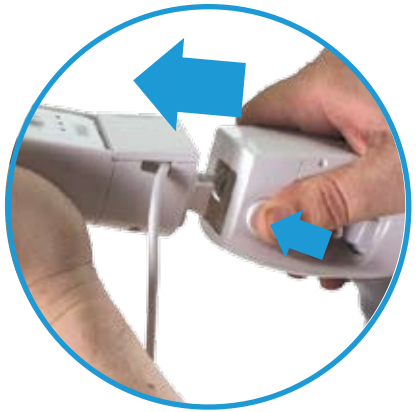

3) The GameBlaster Pro also features a RAPID FIRE Attachment. This attachment is best used when the game requires multiple rounds being fired. It is also helpful to fire off multiple rounds at a single target.

4) To re-connect to the GameBlaster Pro, slide the barrel back into the Nunchuck's sleeve.

5) The button layout varies with each video game. Refer to the game instruction manual for the button configurations.

6) Many games allow altering the games button configuration. Check the options menu in the video game for this feature.

Troubleshooting

Problem: The Wii Remote does not go into or have the proper fit in the barrel of the GameBlaster Pro.
Solution: Check the GameBlaster Pro's barrel casing to see if there are any broken parts or anything else that would hinder the proper setting of the Wii Remote.

Problem: The Wii Nunchuk does not go into or have the proper fit in the Nunchuck casing.
Solution: Check the GameBlaster Pro's Nunchuck casing to see if there are any broken parts or anything else that would hinder the proper setting of the Nunchuck.

Problem: The lid on the GameBlaster Pro does not open/close.
Solution: Check the GameBlaster Pro's lid to see if there are any broken parts or anything else that would hinder the proper closing/opening of the lid.

Problem: The Rapid Fire Attachment does not fit properly/securely.
Solution: Check to see if there are any broken parts or anything else on BOTH the Rapid Fire Attachment and the tip of the barrel that would hinder proper fit.

Problem: The rotating barrel does not rotate.
Solution: Check to see if there are any broken parts or anything else that would hinder the motion of the rotating barrel.

Problem: The Rapid Fire Attachment does not work.
Solution: Make sure the battery is adequately charged and that it is properly and securely inserted.

Problem: The Wii Remote does not work.
Solution: Make sure the battery is adequately charged and that it is properly and securely inserted.

NOTE: Be sure and keep your battery clean. Dirt and debris harm the battery contacts. Use a dry cloth to clean the battery. DO NOT use water or any chemicals to clean.

dreamGEAR®

iSound®

WARRANTY CARD

You have purchased a quality product that has been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs dreamGEAR, at its option, will repair or replace the product purchased at no charge.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

To obtain warranty service send the defective product postage prepaid, along with a copy of the original sales receipt showing purchase date to:

Attention: Returns Department
dreamGEAR, LLC
P.O. Box 478
Torrance, CA 90508

For further information please call our Customer Hotline at 877-999-DREAM (International customers please call 310-222-1045), or visit our websites **www.isound.net** or **www.dreamgear.net**. Please allow 4 to 6 weeks for processing.